Installation Instructions
Task Light

GENERAL INFORMATION
When the Task Light option is ordered the light(s) must be installed. Brackets are preinstalled at the factory on the bottom side of the Upper Unit for mounting the Task Light(s). There are two #10-24 x 3/8" screws and lockwashers used to mount each light to the bracket.

NOTE
For ease of installation, install the Task Light(s) to the bottom of the Upper Unit before installing the Upper Unit to the Console.

- **A.** Remove lens cover and bulb from Task Light.
- **B.** Place Task Light in position on bracket.
- **C.** Install two #10-24 x 3/8" mounting screws and lockwashers through keyhole slots in Task Light into nutserts in bracket.
- **D.** Install bulb and lens cover.

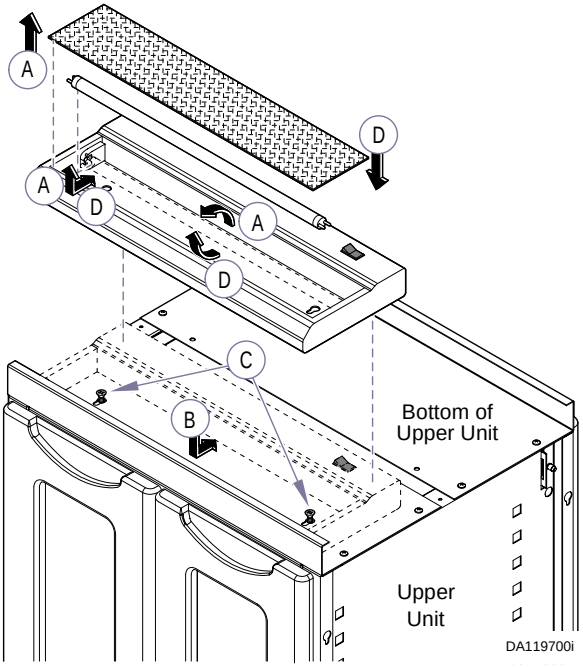

NOTE
Assure channel in bottom of Upper Unit is not obstructed by power cord(s) from Task Light.
A center mounted Privacy Panel may need to fit into channel.

- **A.** Route power cord to side of Upper Unit that will face Center Console.
  Do not obstruct channel in Upper Unit.
- **B.** Secure the power cord with a wrap-n-tap.

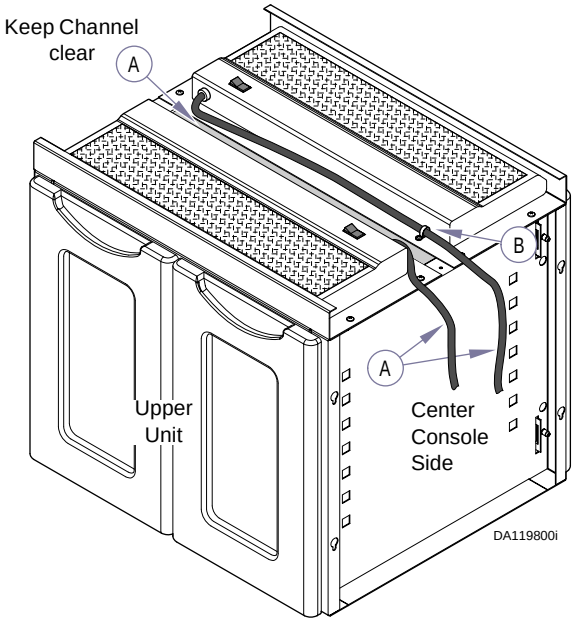

© Midmark Corporation - 2002

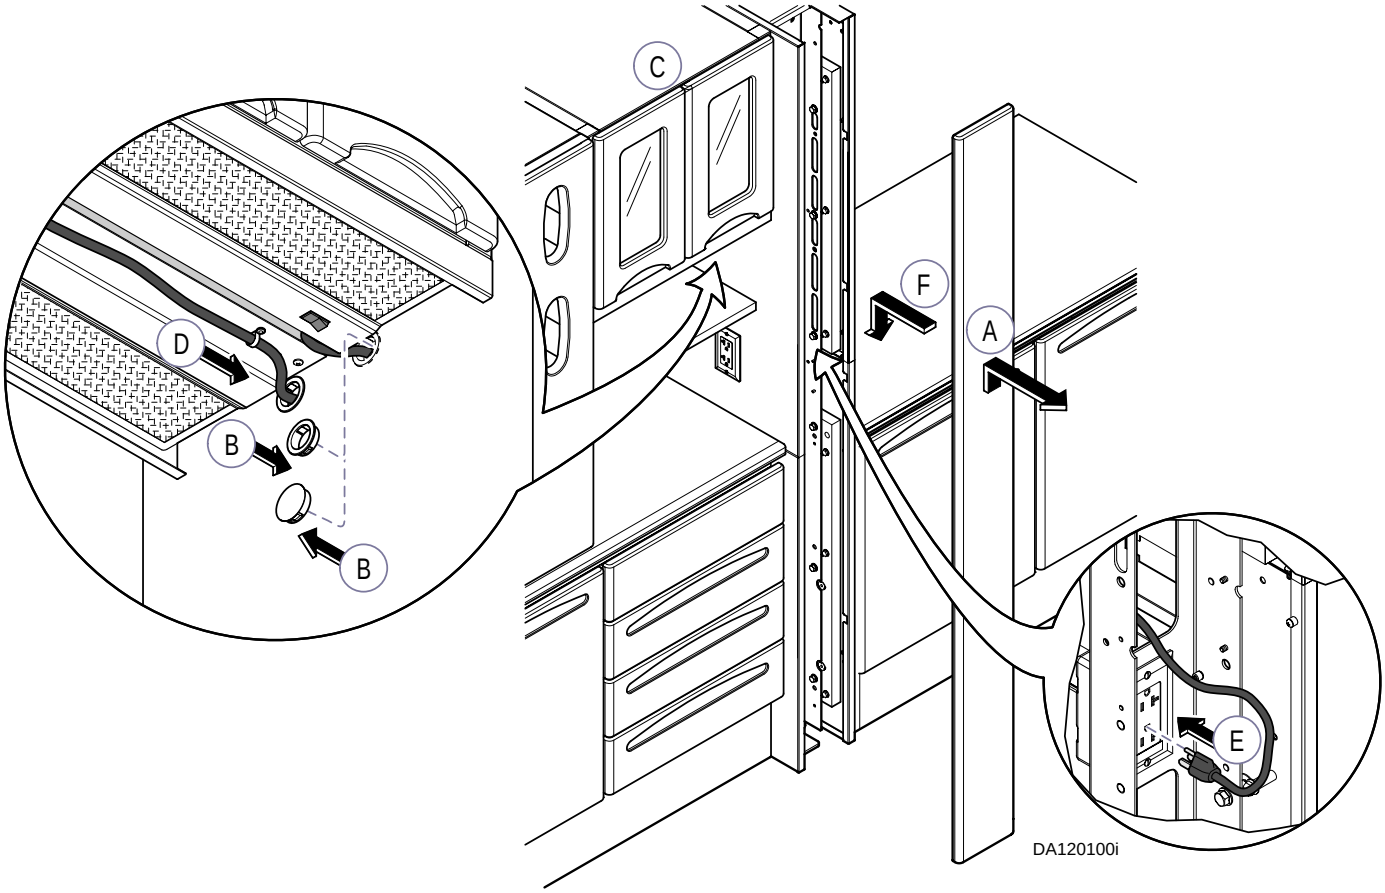

A. Remove end panels from Center Column.

NOTE

Before installing the Upper Unit, remove the hole plug(s) and install the grommet(s).

B. If installed, remove hole plug and install grommet.

C. Place Upper Unit in position and secure with #10-24 x 5/8" screws. (For more detailed explanation refer to Free Standing Center Console Installation Instructions, 003-1301-00).

D. Insert power cord through grommet. Do not obstruct channel in bottom of Upper Unit.

E. Plug Task Light power cord into the outlet that is on the same side of Center Console as the light.

F. Install end cap on Center Column.

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, Ohio 45380-0286
937-526-3662
Fax 937-526-5542
midmark.com

003-1321-00 Rev. B (12/02)

© Midmark Corporation - 2002